

## TROUBLESHOOTING

PROBLEM	SOLUTION
Cover too loose...	... Turn both tension adjusters counter clockwise to move front bar forward. (Refer to #5, see arrows next to adjuster)
Cover too tight...	... Turn both tension adjusters clockwise to move front bar rearward. (Refer to #5, see arrows next to adjuster)
Cover is too wide...	... Check rails. Rails in - too wide - push all clamps to top of rail.
Too narrow...	... Rails out - too narrow - pull all clamps down on rail. (Refer to #2)
Lopsided cover too much on one side...	... Check front bar. It must be centered side to side. (Refer to #5)
Auto latch doesn't engage...	... Check side rails for height and level. Inspect latch for jammed or broken parts.
Manual slide lock (passenger side) too loose or too tight...	... Use 1/8" allen wrench and adjust set screw tighter or looser as desired. Lock performs best with some friction.

### MANUFACTURER'S PREMIUM COVER™ LIMITED WARRANTY

Agri-Cover, Inc. extends the following limited warranty to the original retail purchaser of its ACCESS® Roll-Up Cover and Rack.

Agri-Cover, Inc. warrants its ACCESS® Roll-Up Cover and Rack to be free from defects in material and workmanship for as long as the original purchaser owns the truck on which the cover was originally installed and as long as the cover remains continuously installed on said truck for three (3) years from date of purchase.

Agri-Cover's sole obligation under this limited warranty is limited to the repair or replacement, at its option, of defective parts only. No labor or service allowance is given or implied. IN NO EVENT SHALL AGRI-COVER, INC. BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL, OR SPECIAL DAMAGES. AGRI-COVER, INC. EXPRESSLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES OF MERCHANTABILITY, AND THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE LIMITED WARRANTY DESCRIPTION CONTAINED HEREIN.

For warranty performance call our Customer Service Department at 701-251-1427 to determine if only a replacement part is needed or if the cover needs to be returned for inspection and repair. **Warranty registration must be on file and/or proof of original purchase (detailed and dated receipt) required for warranty to be effective. Goods to be returned must have a pre-authorized RA # (Returned Authorization Number) – obtained by calling the number above.** Mark the number on the package and ship it freight prepaid to address below. Agri-Cover will pay freight to return goods to sender.

This limited warranty does not cover any damage due to accident, abuse, misuse, alteration, neglect, improper installation, or ordinary wear and tear.

This limited warranty gives you specific legal rights and you may have other rights, which vary, from state to state.



Agri-Cover, Inc.  
Customer Service Dept.  
3000 Hwy. 281 SE • PO Box 508  
Jamestown, ND 58402 • Phone: 701-251-1427


ACCESS is a registered United States trademark of AGRI-COVER, INC.  
U.S. Patent Nos. 5,076,338; 5,174,353; 6,543,835; 6,672,644; 6,851,738; 7,048,227;  
7,008,000; 7,104,586; 7,066,524 and other patents pending.

Phone 701-251-1427 8 am - 5 pm Central Standard Time – Monday thru Friday except Holidays

© 2007 AGRI-COVER, INC., ALL RIGHTS RESERVED

Part No. 50135 REV:INIT.

040907TR300

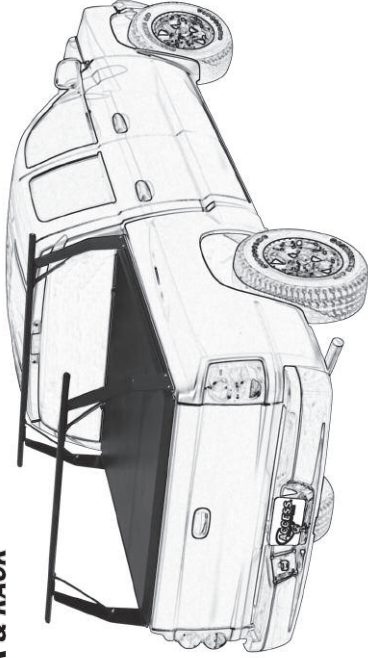

BY



## INSTALLATION INSTRUCTIONS AND OWNER'S MANUAL

Thank you for purchasing an ACCESS roll-up cover and rack. ACI has manufactured this roll-up cover with pride using superior quality materials and craftsmanship. With proper care, your cover will provide years of service and enjoyment.

**NOTICE TO INSTALLER: It is recommended you take the time to read these instructions before installing this cover even if already familiar with the product. Often improvements are made without prior notice.** Always handle cover and components with care to avoid damage. If you find a part missing or defective, or if you are having trouble installing this product, please have serial number ready (found on decal under rear bar by tailgate) and call the customer service number on the back page. **When done, these instructions and warranty information must be given to the consumer.**

**NOTICE TO CONSUMER: Before using this product, read the operating instructions, maintenance and safety sections of this owners manual and save for future reference.**

### FOR YOUR RECORDS:

DATE PURCHASED \_\_\_\_\_

WHERE PURCHASED \_\_\_\_\_

SERIAL NUMBER \_\_\_\_\_  
(Located on decal under rear bar by tailgate)

### IMPORTANT

Promptly confirm your warranty by registering on-line at [www.agricover.com](http://www.agricover.com)



**PREPARATION:** Unpack cover components.  
Clean truck box if dirty.

- 1 driver side rail
  - 1 passenger side rail
  - 1 Element Seal Kit
  - 8 clamps
- See page 4 for rack components.)

#### TOOLS NEEDED:



- 2 - 9/16" wrenches and foot lb. torque wrench
- 1 - Clamping tool (to hold rails in place while clamping) optional
- 1 - Scissor 1 - Tape measure or ruler Protective eyewear

**ROLL-UP COVER INSTALLATION INSTRUCTIONS:** (Note: For additional installation assistance go online to access-cover.com, instruction manual and click on installation video.)

**1** Mount roll-up cover rack side rail as shown. Install first clamp as close to front as possible. Space 2nd and 3rd clamp evenly between front and rear with 4th clamp as close to tailgate as possible. See illustration. Mount opposite rail in same manner.

**NOTE:** On some installs a clamping tool may be helpful to hold side rail down tight to box while tightening cover clamps.



**NOTE:** Some kits may have inserts with special clamping instructions.

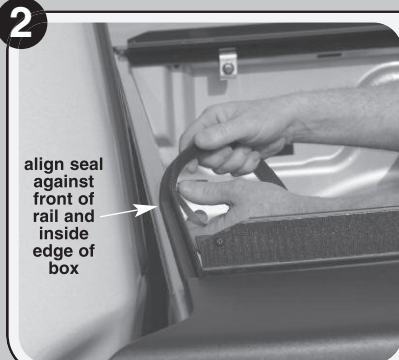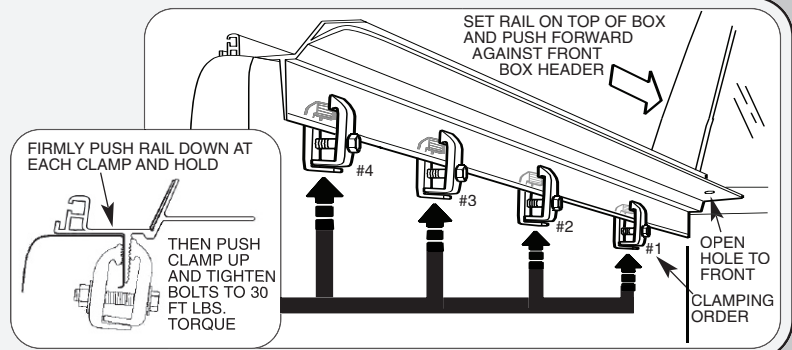

align seal against front of rail and inside edge of box


At front of box header, clean top surface with alcohol pad (if needed wash first). Peel paper back, align and adhere Element Seal™ at one corner across box to opposite corner and cut to length. See photo at left and illustration at right.

**Note:** For additional protection - locate and seal miscellaneous factory holes, crevices, stake pockets, etc. that may be on box (sealant not included).

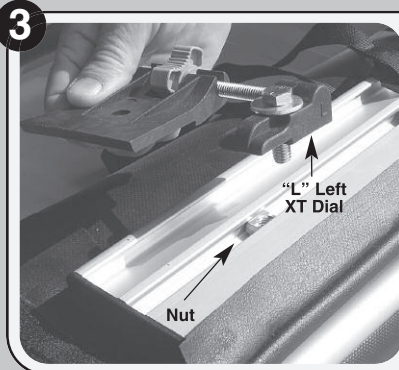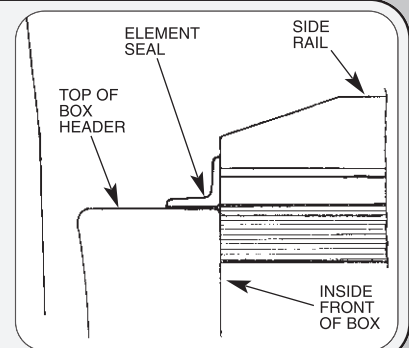

The cover comes pre-rolled to its normal open position. Set pre-rolled cover on tailgate with front bar facing up as shown. Align XT Dial Tension Adjuster (marked L) on driver side of cover - positioned as shown in photo at left.

Turn 1-1/4" bolt with flat washer onto nut in bar. Leave loose for now. See photo at right. Repeat for XT Dial (R) on passenger side of cover, and leave that bolt loose also.

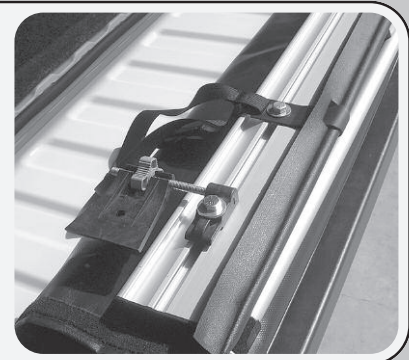

Set rolled up cover on rails at front of box (behind cab) with bar facing up. Roll cover bar onto front of rails and fold/tuck vinyl flap under. Now bar will face down. Let straps hang to inside of box. See photo at left.

Push cover bar forward until it sets flat on front rails and overhangs them. Slide left tension adjuster over until it engages under side rail. Push bar back and forth to line up holes - do not turn dial wheel. Insert bolt from top and flat washer and nut from bottom. See photo at right.

**Note:** These holes are designed for a snug fit - you may need to turn the bolt through rail and adjuster with wrench. The bolt will thread through without harming any pieces.




Hold bolt at top and tighten nut under side rail. Repeat procedure for right hand tension adjuster. See photo at left.

Center the front bar between the two side rails. See photo at right.

Then tighten bolt (left loose earlier) under front bar on each tension adjuster. See photo at far right.



center front bar between rails until space is equal at both ends

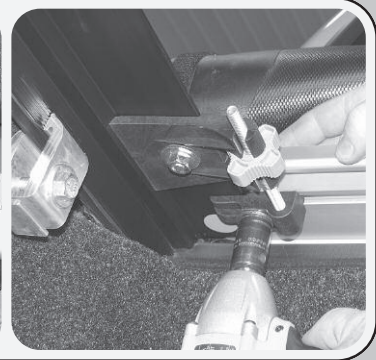


5




Unroll cover and place rear bar into strikes on side rails and press down on bar to close (20-30 pounds pressure).

**Note:** See operating instructions on page 4.

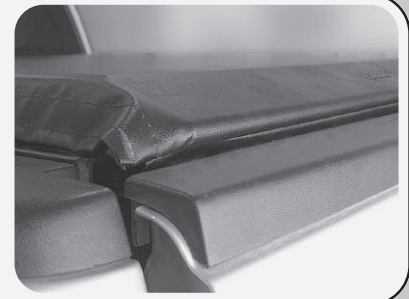

Check cover tension by releasing autolatch and open and close rear bar several times. It should snap down when closing. Cover fabric should sound drumlike when tapped on. If adjustment is needed, roll cover open and **turn XT dial counter-clockwise to tighten, clockwise to loosen. Always turn dials in equal amounts.** See photo at left.

When done, seal both sides of cover with hook and loop system. See photo at right.

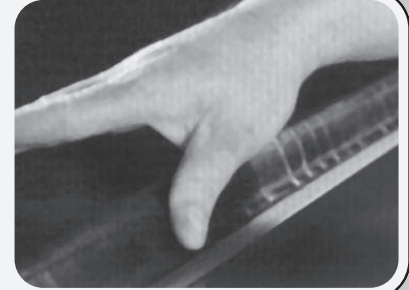

## RACK ASSEMBLY INSTRUCTIONS:




It is critical that ACI racks be properly assembled and securely attached to vehicle. See page 5 Rack Safety Information.

1

A) Loosely assemble upright hardware as shown.


Rack parts included:

- 4 - uprights
- 2 - load bars
- 4 - diagonal braces (none on low rack)
- 4 - backing plates 2 hole
- 4 - backing plates 1 hole (none on low rack)
- 4 - end caps
- 24 - 1/4 flat washers (16 on low rack)
- 20 - 1/4 split lock washers (16 on low rack)
- 24 - 1/4-20 x 3/4 button head allen bolts (16 on low rack)
- 12 - 1/4-20 nylon insert lock nuts (8 on low rack)
- 4 - 1/4-20 x 9/16 narrow shoulder bolts
- - rope foam filler
- 1 - hex key wrench 5/32 (to be used for assembly and saved for end user's convenience in adjustment or removal)

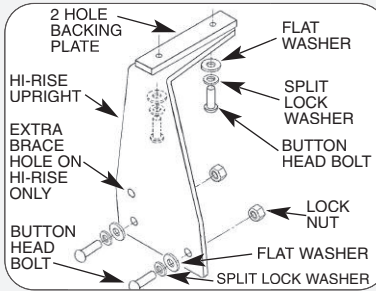


3

- A) On high racks, insert single hole backing plate into bottom (flat) side of load bar first.
- B) Mount load bars flat side down to top of upright assembly.
- C) Insert load bar so backing plate on upright assembly slides into the bottom channel of load bar.

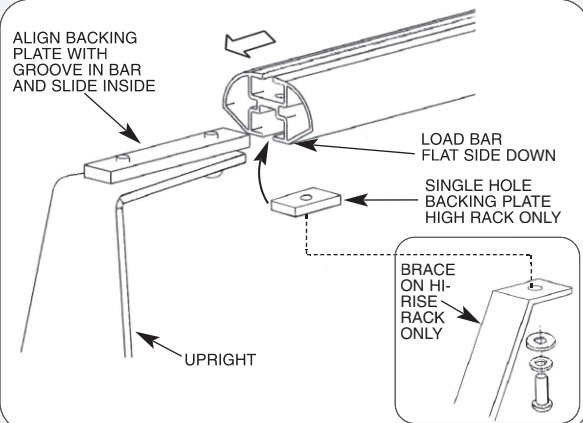


2

- A) Roll cover open and store behind cab.
- B) Align uprights at end of rail with top angle facing into truck box.
- C) Then slide upright and nuts into respective grooves on rail.

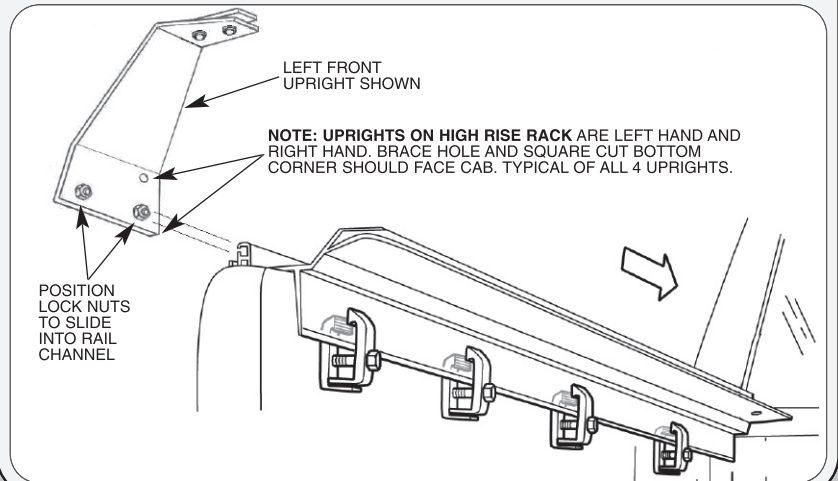

4

- A) Slide bar in far enough until opposite end can be mounted to opposite upright. Center load bar across the uprights.
- B) If high rack, mount diagonal brace to each upright and to backing plate with button head bolt, flat washer and lock nut. Then bolt brace with button head bolt, lock washer and flat washer to backing plate in load bar. Leave load bar bolts loose for now.
- C) Slide rack assembly to desired location and **TIGHTEN ALL** bolts with hex key wrench.
- D) Place end cap in each end of both load bars, hold firmly and carefully turn shoulder bolt into threads of end cap. Store hex key wrench with these instructions in vehicle.

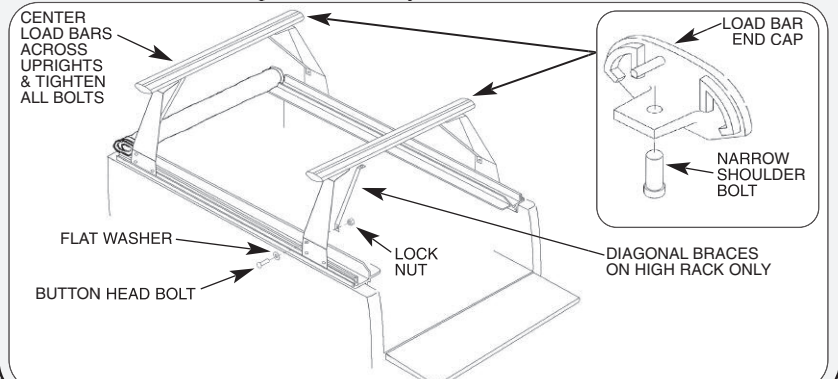

# COVER OPERATING INSTRUCTIONS: (Note: view opening and closing demonstration video on access.com.)

## TO CLOSE



Release retainer straps at front and using both hands roll cover out to rear of box.



Position roll-up bar against strikes. Push down on bar until autolatch locks in place.




Now along side of box, seal cover edges with hook and loop sealing system the full length of cover on both sides. Pull with one hand - seal with other hand.

## OPTIONAL USE



Manual Slide Lock (use is optional) - under cover bar on passenger side - push slide lock to engage.

## TO OPEN

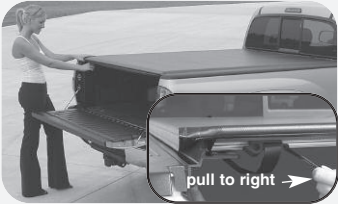

Open tailgate on driver side pull autolatch and lift up on rear of roll bar.



Using both hands, roll cover toward front of box (not against cab).



Securely fasten retainer straps to store the cover.

## OPTIONAL USE



Under cover bar on passenger side - if slide lock is locked pull to disengage.

-4-

**SAFETY WARNING: ALWAYS FINISH SECURING THE COVER. USE CAUTION WHEN OPERATING COVER IN WINDY CONDITIONS.**

## INSPECTION AND MAINTENANCE


- Inspection and much of the maintenance can be done by the operator. It may be necessary to review the installation and operating instructions.
- Periodically inspect the cover assembly. Check for loose bolts and parts and the condition of all parts. Test the operation to ensure that the parts are functioning properly and that the cover is in top operational condition.
- If autolatch has been damaged replace with new one. **NOTE:** Inspection and/or maintenance should also be performed anytime a malfunction is observed or suspected. If you need assistance inspecting and/or servicing your cover, or if you want to order a replacement part, call the customer service number on the back page. Always use original equipment replacement parts for your cover and rack.
- Vinyl cover can be treated with water base vinyl protectants. Avoid silicon base products.
- When cleaning, for best results use mild liquid soap and water. Never clean cover with petroleum or citrus base products.

## RACK TIPS

A) **LOAD BAR ROPE FILLER**—Foam included for your convenience to use as filler in empty track on top and bottom of the load bars. It can be cut to fit between accessories and is easily pressed into place. This deters collection of debris and wind whistling that may occur. See diagram to right.

B) **ADJUSTING LOCATION OF LOAD BARS**—Use hex key wrench, loosen two bottom bolts on uprights. (On tapered boxes also loosen the bolts under the load bar.) Slide assembly to desired location. Retighten all bolts when done.

C) **Your new rack system is compatible with ProRack and most other rack accessory manufacturers such as Thule and Yakima.**

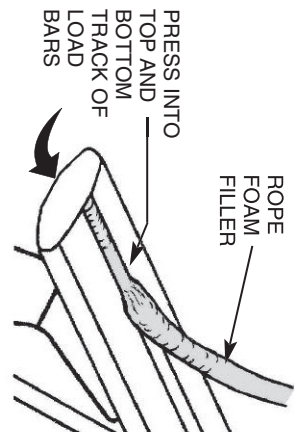

## ▲ ROLL-UP COVER SAFETY INFORMATION

- Do not cover cargo that is higher than the cover.
- Do not place object(s) on or against the cover or its framework at any time.
- Always secure cargo so cargo can not shift and damage the cover or its parts.
- Do not use the covers' framework to tie down cargo.
- Never stand, sit or ride on the cover or allow others to do so.
- Do not leave valuables in an unattended vehicle as the cover does not prevent theft of contents in the truck box.
- The cover does not eliminate moisture and dust from entering the truck box. Special wrapping or packaging of the contents may be necessary.
- Due to poor ventilation, if you allow a pet animal in the box, leave cover open. Do not allow people or animals to occupy box with the cover closed.
- When towing vehicle backwards, cover must be rolled fully open and secured with safety straps or fully closed and secured with manual slide lock.

## ▲ RACK SAFETY INFORMATION

- When using Rack System and accessories, the user must understand the precautions. The points listed below will assist you in using the rack system and will encourage safety. Please review the instructions and warranty carefully. Assembly and installation are the end user's responsibility and beyond ACT's control. Therefore, ACT exclusively limits its warranty to the repair or replacement of a defective ACT product. Damage to your vehicle, cargo, or to any person or property is excluded.
- Do not carry more than 200 lbs. per load bar. ACT can not warranty loads that exceed this limit. Total load equals cargo weight plus weight of accessories used to carry cargo.
  - Make sure all bolts, screws, straps, and locks are firmly attached, tightened and locked before every trip. Bolts, screws, straps and locks must be periodically inspected for signs of wear, corrosion and fatigue. Check your load at stops during the trip to insure continued fastening security.
  - Remove your rack and accessories before entering automatic car washes.
  - For safety to your vehicle and rack system, obey all posted speed limits and traffic cautions. Adapt your speed to the conditions of the road and the load being carried.
  - Check local and state laws governing projection of objects beyond the width of a vehicle. Be aware of the width and height of your cargo since low clearance branches, bridges and parking garages can affect the load. All cargo will affect the vehicle's driving behavior. Never drive with any lock or rack in an open or unlocked position. All long loads such as, but not limited to, sailboards, surfboards, kayaks, canoes and lumber must be tied down securely.
  - Do not use rack system and accessories for purposes other than those for which they were designed. Do not exceed their carrying capacity. Failure to follow these guidelines of the product's instructions will void the warranty.

-5-